
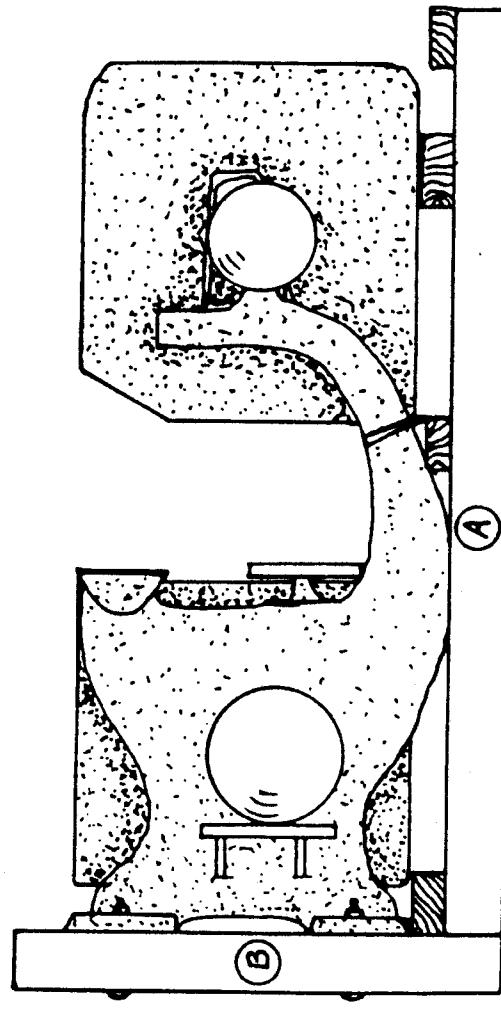


UNCRATING A BANDSAW


NORTHFIELD FOUNDRY &
MACHINE CO.

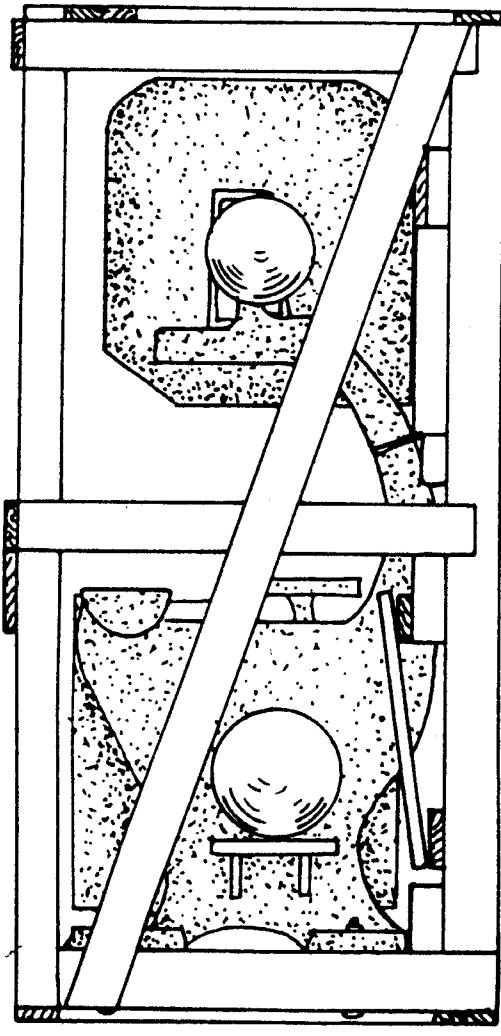

1. REMOVE PARTS LYING ON
FRAME OF CRATE (TABLE,
GUIDE, ETC.).

2. REMOVE CRATING, EXCEPT THE
BASE AND SKIDS ATTACHED TO
FEET OF SAW.

CHAIN TO PREVENT
SLIPPING

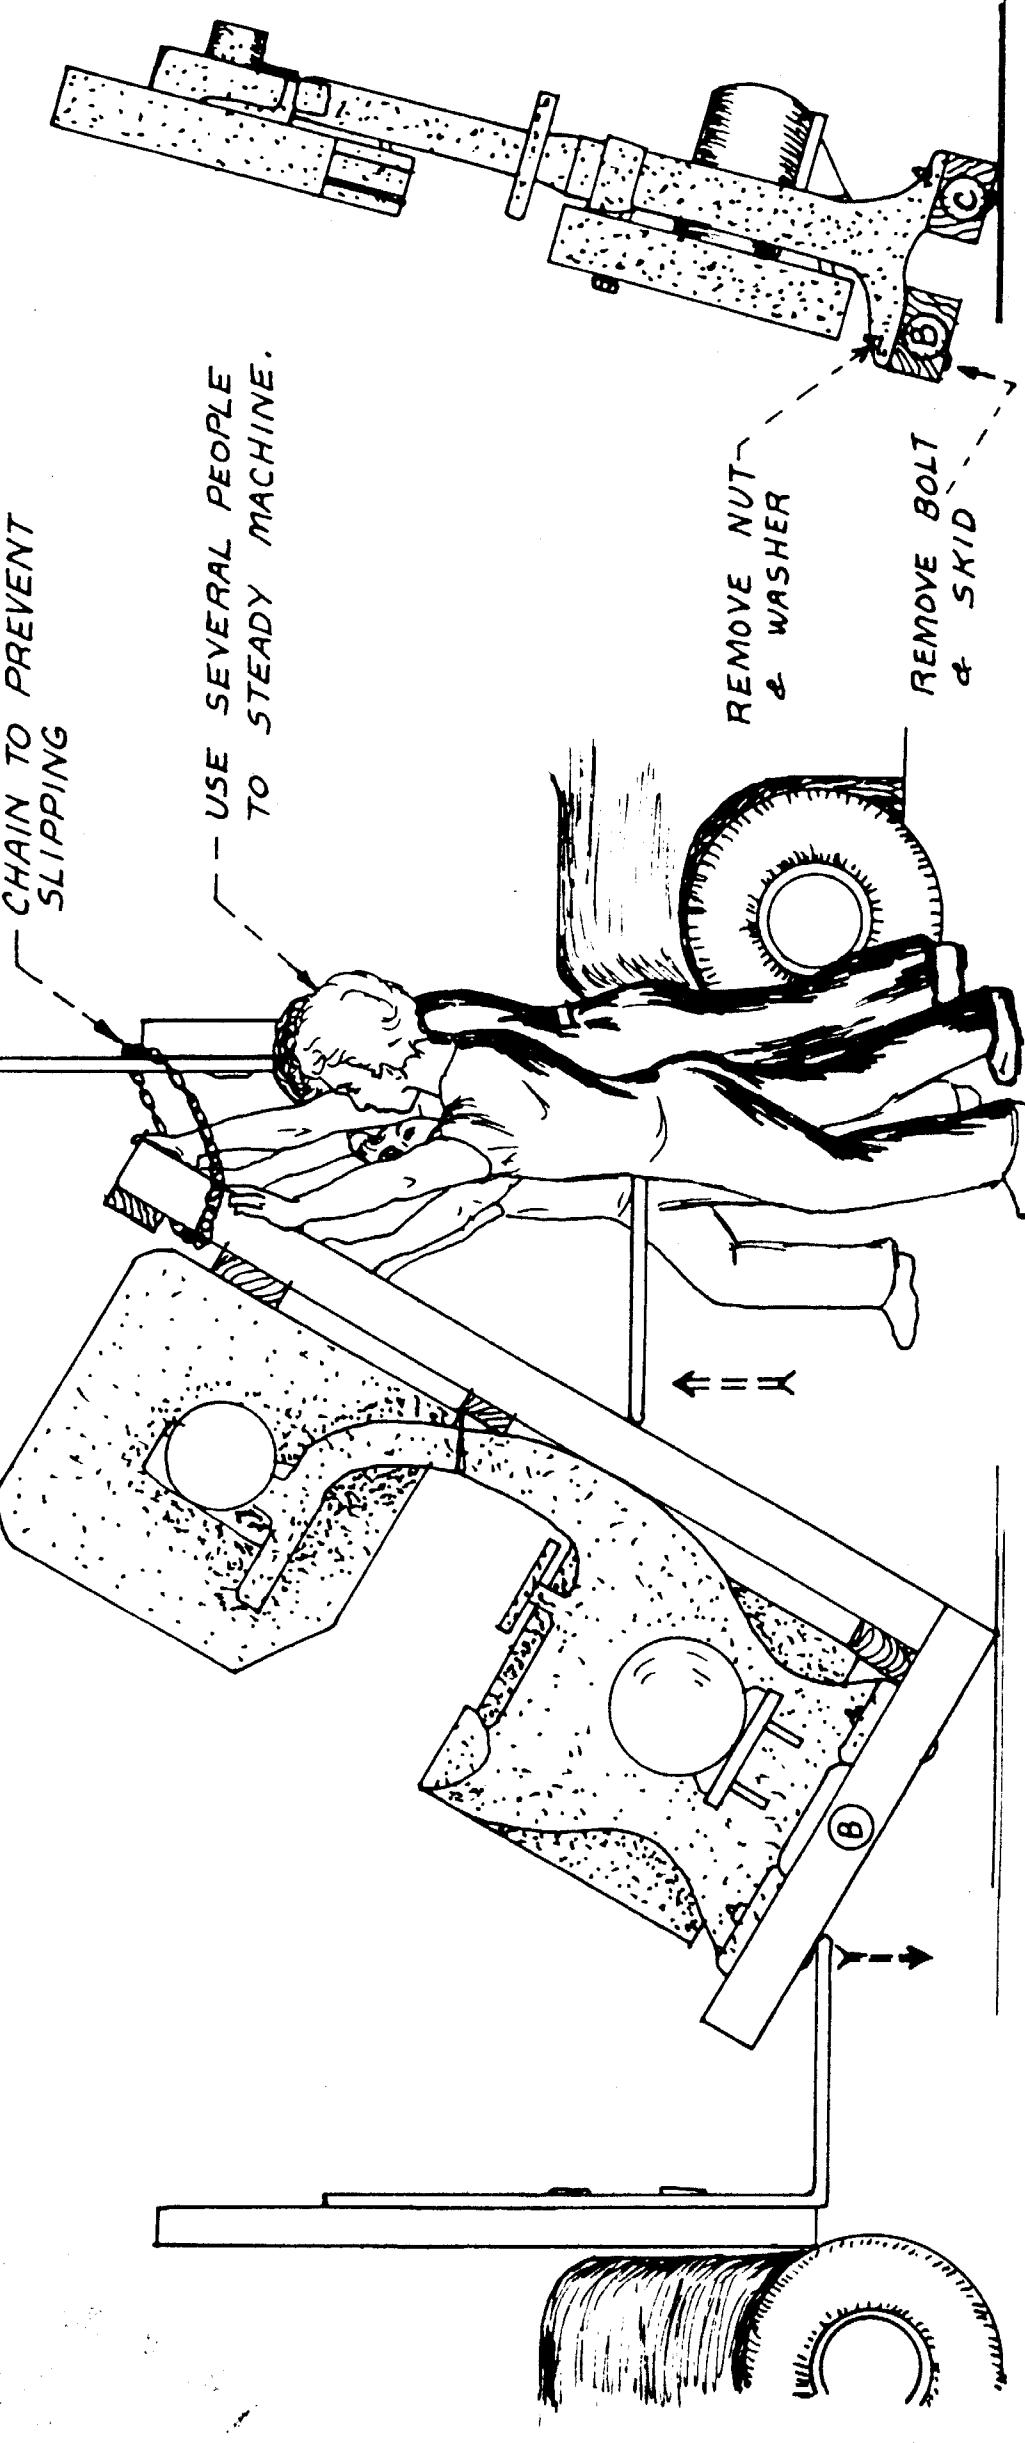

3. TIP SAW UPRIGHT ONTO SKIDS. ®
(WE RECOMMEND USING TWO FORKLIFTS;
ONE TO RAISE & ONE TO LOWER).

THESE INSTRUCTIONS ARE
GIVEN TO AVOID DAMAGE
WHEN SETTING UP THE
MACHINE.

4-3-80 *Jim*
36-454